

Setting up the Product on a personal computer*

* OS: Windows® XP, Windows Vista®, Windows® 7, Windows® 8

(1) Download the latest FlashAir™ configuration software (Ver.2.00 or later) from the website below.


<http://www.toshiba.co.jp/p-media/wwwsite/flashair.htm>

Double-click the downloaded “FlashAir.exe” to install the Product’s software. After the installation is complete, a “FlashAirTool” icon appears on the desktop of your computer. Double-click the icon to start the FlashAir™ configuration software (Fig. 6). After the software starts, it moves to the Network settings screen (Fig.7) automatically. If it doesn’t move there, click “Network Settings” on the main menu.

Fig. 6: FlashAir™ configuration software main menu



Fig. 7: FlashAir™ configuration software network settings screen

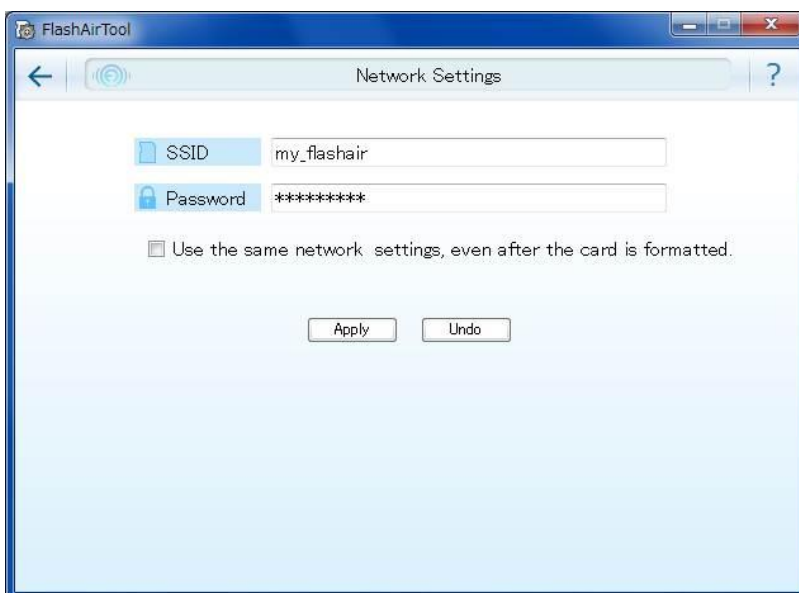

(2) When the screen (Fig. 7) is displayed, enter the new network name in the SSID field and a new password in the Password field. Click “Apply” to apply the settings.

The SSID can be up to thirty two (32) alphanumeric characters.

The password should have eight (8) to sixty three (63) characters. Use a secure password that is not easy to guess. Toshiba recommends you make a note of your SSID and password.

(3) This completes your initial settings.