 


USING A 12 BUTTON
CONTROLLER

Turn Left	2 x Up	Turn Right
Open Hands	1 x Up	Close Hands
	1 x Down	
Reset R.O.B.	2 x Down	

USING THE JOYSTICK
CONTROLLERS

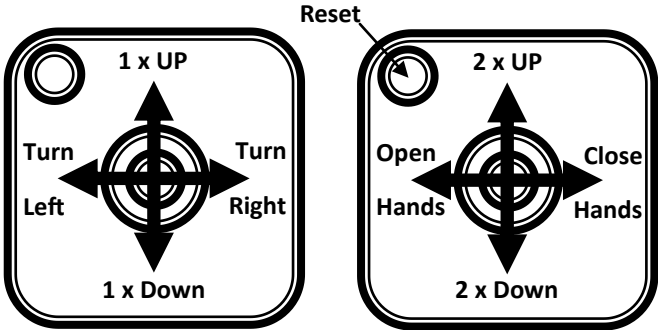


ADDITIONAL NOTES

After selecting a command, you will see the screen flash the control codes to your R.O.B. During the flashes the screen will show arrows indicating which function was selected.

If your R.O.B. does not respond, follow its instructions for setting it up with your CRT Television, and verify it works with its original software and system.


NON-TENDO R.O.B.
GAME PROGRAM
INSTRUCTIONS

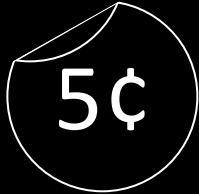

2011 Bent Nickel Software

Use with 2 Joystick Controllers or a 12 button Kids Controller, Video Touch Pad, or Atari Key Pad. Be sure that both Joysticks are plugged into the LEFT and RIGHT jacks on your Video Computer System, or one of the 12 button controllers in the RIGHT jack.


Note: Always turn the console power switch OFF when inserting or removing a Game Program cartridge. This will protect the electronic components and prolong the life of your Video Computer System

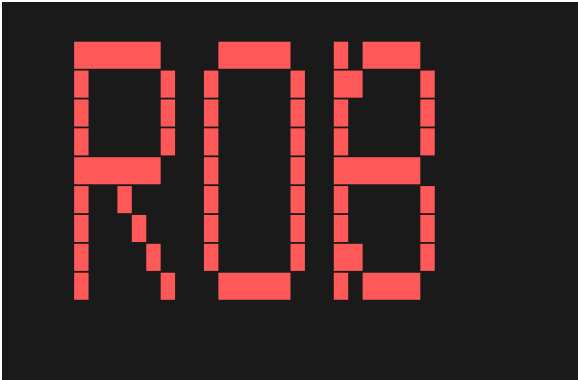

When at the R.O.B. Title Screen you select whether you will be using 2 joysticks or a 12 button controller via the difficulty switches. If they match, you will be in Joystick mode. If they are set opposite of each other you will be in 12 button controller mode.


HOW TO PLAY

After inserting the cartridge, connecting controllers, and turning on the system and setting a difficulty switch, press the Game Reset switch. You will be taken to this screen.

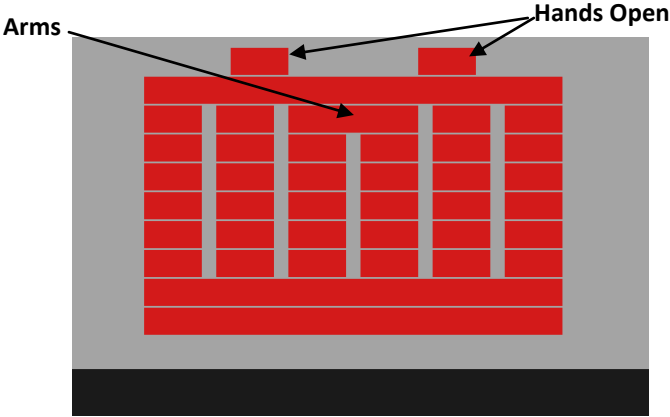

This is a graphical representation of the position of the height and rotation of R.O.B.'s arms, as well as if the hands are open or closed. It is representing the default home position as after a "Reset".

This screen indicates the arms are down to position 4 and left 1 position from center, and the hands are open.

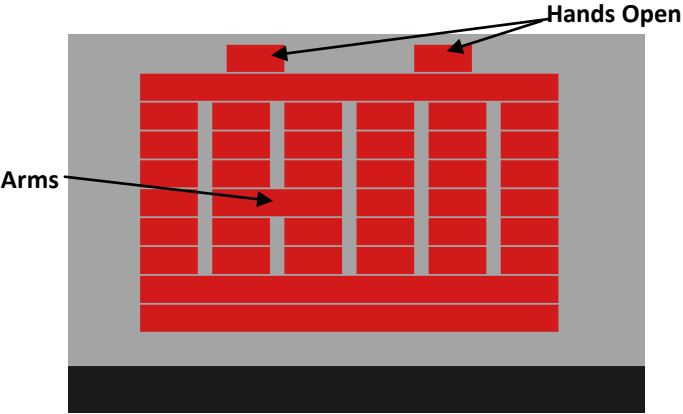

This screen indicates the arms are down to position 4 and right 1 position from center, and the hands are closed.

