

MENU

To enter the settings, turn off the cartridge, press and hold the middle buttons (Up and Down) and then turn on the power. Scrolling through the Menu with the Up and Down buttons, confirming the selection with the Enter button, exiting the parameter settings without saving with the Esc button. Exit the menu entirely with the Esc key.

